

## User's Guide

### 10.4" Display on Manual Lift

Use this guide to operate the lift mechanism that raises and lowers the display, and to adjust the screen settings.

#### Operating the Lift

USE CAUTION when stowing or deploying lift. The spring lift is under pressure and could seriously injure hands/fingers if caught in mechanism during operation. When lowering the display, align the screen with the cabinet and push down firmly on the right corner until the latch locks. The power turns on and off automatically when you raise and lower the lift.



To raise the display, pull the latch in the right corner of the cabinet.



 



To stow the display, push down here. ↓




#### About the Display Buttons

The buttons also work as soft keys that control secondary navigational functions to adjust the picture quality in the on-screen menus. When you press a button and see a bar of blue soft keys, as shown below, press the corresponding display button.

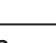

<b>Source Select</b>		Functions as a secondary soft key for navigation in the on-screen menus.
<b>Aspect Ratio</b>		Two modes: Normal and Vertical Stretch change the proportions of the image depending on the DVD format. Use the arrow soft keys to adjust, and then press SET. Also available in Main Menu.
<b>Brightness</b>		Adjusts the picture brightness. Use the arrow soft keys to adjust, and then press SET. Also available in Image Adjustments Menu.
<b>Contrast</b>		Adjusts the picture contrast. Use the arrow soft keys to raise or lower the contrast, and then press SET. Also available in Image Adjustments Menu.
<b>Menu</b>		Opens the Main Menu to access other settings. Use the arrow soft keys to select the options, and then press OK to select.
<b>Power</b>		Turns the power on and off to the display. Previously adjusted settings are saved in memory when power is turned off.

## Main Menu Options

Press the  Menu button and arrow soft keys to access the menu options. The options available depend on which source signal is active. To close the menus, use the Back and Exit options, or allow the menu to close automatically.



Main Menu

**Aspect Ratio** described under Display Buttons table.

**Backlight Brightness** adjusts the intensity of the LCD backlight. Select either Dim or Bright, and then press SET.

**Information** shows the operating status of the display. Press SET to close.

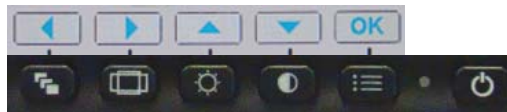


Image Adjustments Menu	How it Works
<b>Brightness</b>	Described under Display Buttons.
<b>Contrast</b>	Described under Display Buttons.
<b>Saturation</b>	Intensifies the image colors. Use the arrow soft keys to fine-tune the colors, and then press SET.
<b>Tint (Hue)</b>	Shifts the color balance. Use the arrow soft keys to change the tint, and then press SET.
<b>Sharpness</b>	Adjusts the sharpness of the picture. Use the arrow soft keys to change the sharpness, and then press SET.

Advanced Menu	How it Works
<b>Restore Factory Defaults</b>	Two factory color modes: Vivid and Natural. Try both modes before adjusting other settings. Change the mode with the arrow soft keys, and then press SET.
<b>Menu Timeout</b>	Sets the amount of time the menu items remain on the screen after making changes. Change the timeout with the arrow soft keys, and then press SET.
<b>Power Up Mode</b>	Determines the on/off state when the aircraft receives power – Auto On, Auto Off, or Restore Previous. Change the mode with the arrow soft keys, and then press SET.

1020 Owen Loop South  
Eugene, OR 97402  
1-888-668-4955  
Fax: 541-342-4912

**ROSEN**  
AVIATION  
[www.rosenaviation.com](http://www.rosenaviation.com)

© 2008, Rosen Aviation, LLC  
Part Number: 101845 Rev A  
Artwork per P/N: 100509 Rev A